


# B&A Phone 4-Port ISDN

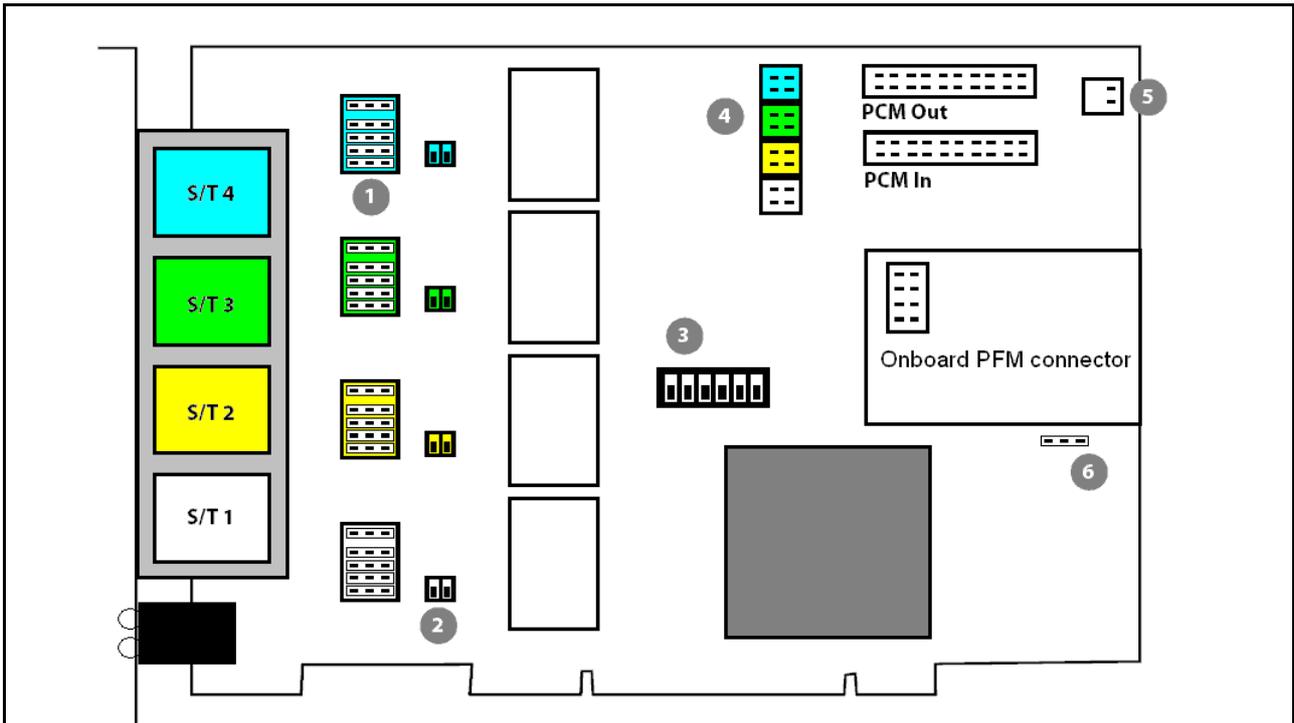

## 1 TE/NT Settings



### TE Mode

Jumpers to the right (default)



### NT Mode

Jumpers to the left

## 2 S/T Termination



Termination on (default)



Termination off

## 3 Card ID switches

DIP switches 1 to 3 can be used to set the card ID (useful to identify a card having more than one installed)

Card-ID	0	1	2	3	4	5	6	7
SW1	off	on	off	on	off	on	off	on
SW2	off	off	on	on	off	off	on	on
SW3	off	off	off	off	on	on	on	on

## 4 Power feeding (for NT mode)



disabled for this Port (TE mode)



enabled for this Port (NT mode)

## 5 Power connector

Connector for power feeding module

## 6 Power supply configuration



uses 3.3V from PCI bus (only available in 3.3V PCI slots)



generates 3.3V out of 5V from PCI bus (factory default)



**Borox-Data AG**  
Werdstrasse 40  
8004 Zürich

Telefon: +41 44 242 6040  
Fax: +41 44 242 2161  
E-Mail: [info@borox.ch](mailto:info@borox.ch)